


INSTALLATION SPECIFICATIONS

HAND RAIL MARKERS

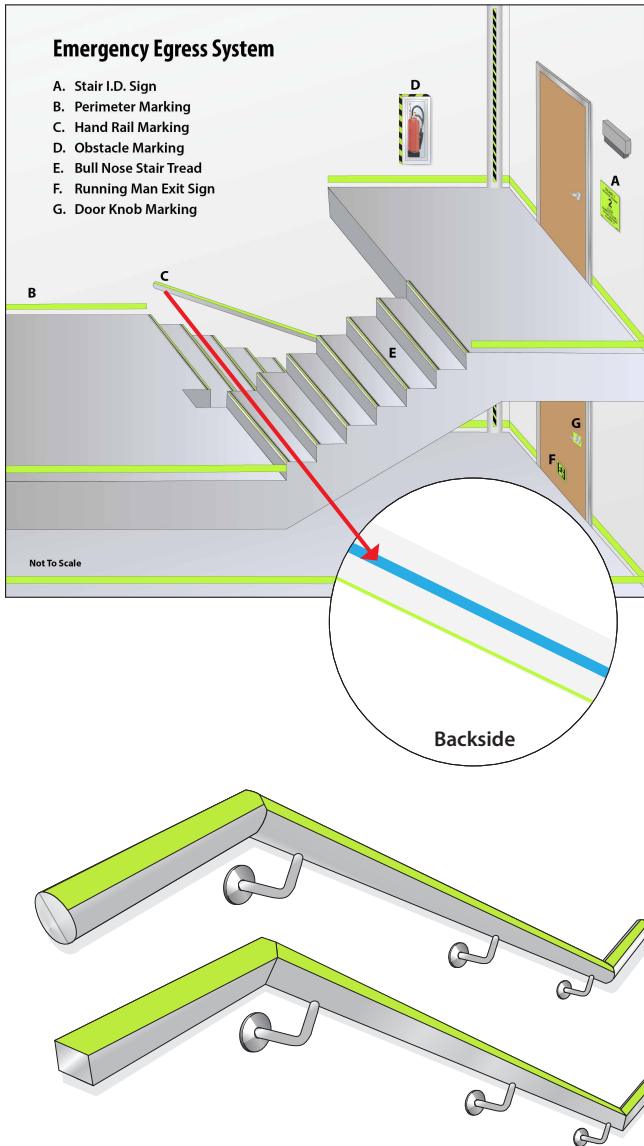

INSTALLATION PROCESS:

GBC's photo-luminescent Hand Rail Markers are typically installed in interior and exterior round aluminum or steel hand rails.

1. Prepare the surface by thoroughly cleaning with a 50/50 denatured alcohol/water solution to remove all contaminants.
2. Determine how many sections of marker are required to complete each straight section of the hand rail.
3. Round the end of 1 section of handrail if multiple pieces are needed to complete the section. Next, apply a 1/8" thin bead of *Loctite PL Premium 3x adhesive* with a caulk gun.
4. Carefully line up the marker on top of the hand rail. If additional pieces are needed to complete the section, measure and cut the pieces with a metal cutting scissors. Round the final end of the section and glue the same as the previous piece.
5. Apply 1" pieces of painters tape around the handrail every 6"-12" as needed to ensure complete contact and at each end, to secure the piece. After 12 hours, remove the tape and clean up any adhesive that may have squeezed out. The installation of the curved photo-luminescent Hand Rail Marker is now complete.

CAN BE INSTALLED ON:

1. Wood
2. Aluminum
3. Metal



GBC-30015-AF



GBC-30015-AC



GBC-3001-AF



GBC-3001-AC



For more information visit: www.gbcsafetyglow.com

3201 Progress Way Kaukauna, WI 54130
920.462.4242 Toll Free: 844.336.4875
info@gbcsafetyglow.com